


### 3 Shift up point adjustment:

You can adjust the shift up point.

The range of the adjustment:

4,200 to 6,400 rpm

- 1 Each time the SEL button is pressed, the set value of the shift up point is increased by 200 rpm (one segment).

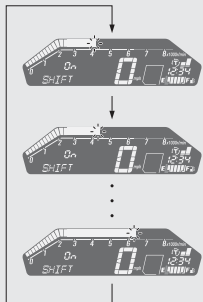

- 2 Press the SET button. The shift up point is set, and the display moves to the activating/deactivating of tripmeter A, average fuel mileage, and fuel consumption automatic reset mode.