



8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install the new oil filter and tighten.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m)

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 22 lbf·ft (30 N·m, 3.1 kgf·m)

11. Fill the crankcase with the recommended oil (► P. 88, ► P. 175) and install the oil fill cap/dipstick.

#### Required oil

##### When changing oil & engine oil filter:

3.6 US qt (3.4 L)

##### When changing oil only:

**NC750X/XA**

3.3 US qt (3.1 L)

**NC750XD**

3.4 US qt (3.2 L)

12. Check the oil level. ► P. 105
13. Check that there are no oil leaks.
14. Install the lower cowl.