

## Ignition switch


Switches the electrical system on/off, locks the steering, and operates the seat opener switch.

- ▶ Key can be removed when in the OFF or LOCK position.

## Steering Lock

Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

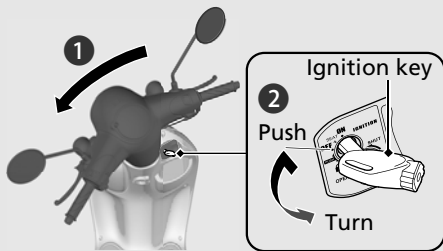

## ON

Turns electrical system on for starting/riding.

## SEAT

Operates the seat opener switch.

## OFF


Turns engine off.

## LOCK

Locks steering.



## Locking

- 1 Turn the handlebar all the way to the left or right.
- 2 Push the key down, and turn the ignition switch to the LOCK  position.
  - ▶ Jiggle the handlebar if the lock is difficult to engage.
- 3 Remove the key.

## Unlocking

Insert the key, push it in, and turn the ignition switch to the OFF position.