Warning Indicators On or Flashing

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

If the indicator lamp comes on while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your scooter inspected by your dealer as soon as possible.