


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➡ P. 31
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➡ P. 31
- Make sure engine stop switch is in the  (Run) position. ➡ P. 26
- Check for a blown fuse. ➡ P. 95
- Check for a loose battery connection or battery terminal corrosion. ➡ P. 52, ➡ P. 62
- Check the condition of the battery. ➡ P. 90

If the problem continues, have your scooter inspected by your dealer.