


Starting the Engine *(Continued)*

If you cannot start the engine:

- ① Place the scooter on its center stand and lock the rear brake.
- ② With the throttle slightly opened (about 1/8 in (3 mm), without freeplay), press the start button or operate the kickstarter with a rapid and continuous motion.

About 1/8 in (3 mm), without freeplay

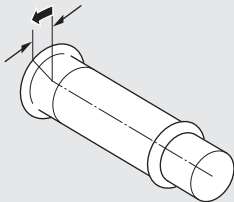

If Engine Will Not Start ➔ P.88

If the engine does not start:

Using the start button

- ① Place the scooter on its center stand and lock the rear brake.
- ② Open the throttle fully and press the start button for 5 seconds.
- ③ Follow the normal starting procedure.
- ④ If the engine starts with unstable idle, open the throttle slightly.
- ⑤ If the engine does not start, wait for 10 seconds, then follow steps ① - ③ again.

Using the kickstarter

- ① Turn the ignition switch to the OFF position.
- ② Open the throttle fully and crank the engine several times with the kickstarter.
- ③ Turn the ignition switch to the ON position.
- ④ Follow the normal starting procedure.
- ⑤ If the engine starts with unstable idle, open the throttle slightly.