

# Rear Brake Lock

Be sure the rear brake lock is applied while starting and warming up the engine.

## Locking

Squeeze the rear brake lever and set the rear brake lock lever.

- ▶ The rear brake lock will not function if the rear brake is not adjusted properly.

➡ P.79

## Unlocking

Squeeze the rear brake lever.

- ▶ Before riding, make sure that the rear brake lock is fully released so there is no drag on the rear wheel.

Rear brake  
lock lever

Rear brake lever

