


Engine Oil & Filters

4. Remove the oil fill cap.


UNDER CARGO BED

CENTER

(SXS1000M3/M3P)

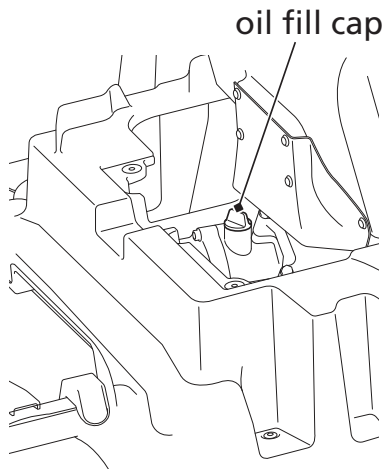

(SXS1000M5P/M5D)

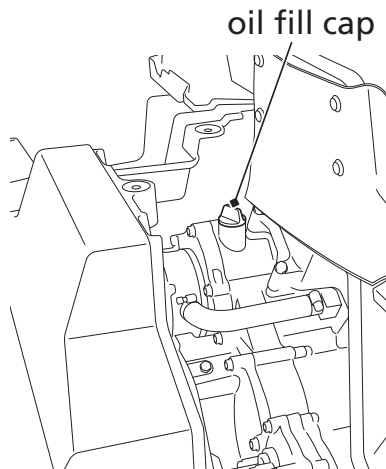

5. Place an oil drain pan under the crankcase.

6. Remove the engine oil drain bolts and sealing washers.

UNDER BODY

