


Lubrication

Lubricate the door latch as shown in the following illustration. Open the door (page 45).

(SXS700M5P/M5D only)

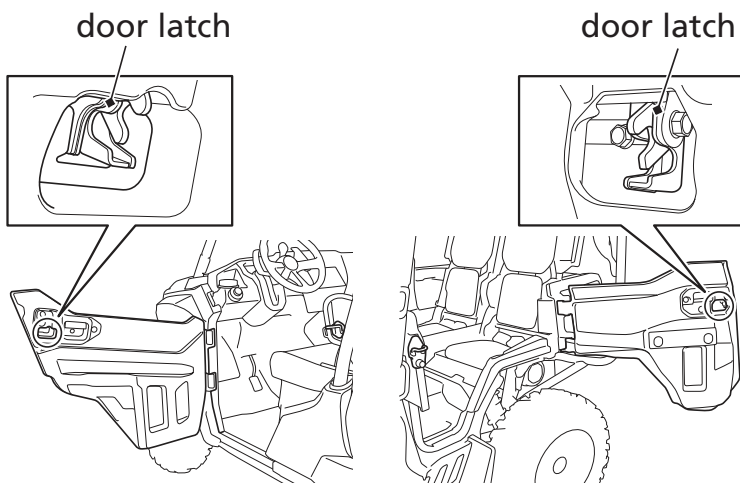

Lubricate the rear seat latch as shown in the following illustration.

(SXS1000M5P/M5D only)

