

# Air Cleaner Outer Cover Removal

---

Refer to *Safety Precautions* on page 123.

The air cleaner outer cover must be removed to replace the air cleaner and for spark plug maintenance.

## Removal

1. Lift the cargo bed (page 81).
2. Remove the clips (page 142).
3. Remove the prong from the grommet.

## Installation

1. Insert the prong into the grommet.
2. Install the clips.
3. Lower the cargo bed.

### UNDER CARGO BED

