


Lubrication

Lubricate the shift select lever pivots as shown in the following illustration.

Remove the front hood (page 137).

UNDER FRONT HOOD

shift select lever pivots

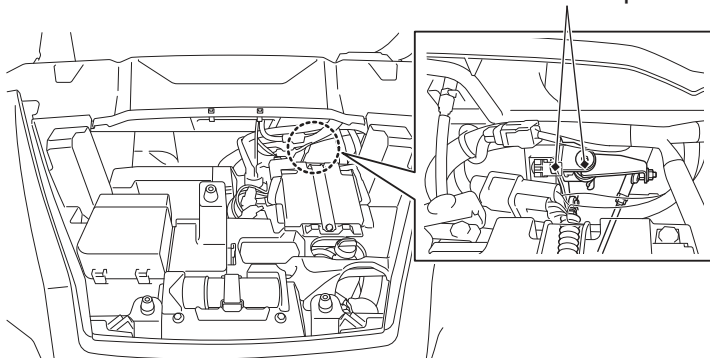


Lubricate the drive mode select lever pivots as shown in the following illustration.

Remove the front hood (page 137).

UNDER FRONT HOOD

**drive mode select lever pivots
(SXS1000M3/M3P/M5P/M5D only)**

**drive mode select lever
pivots**

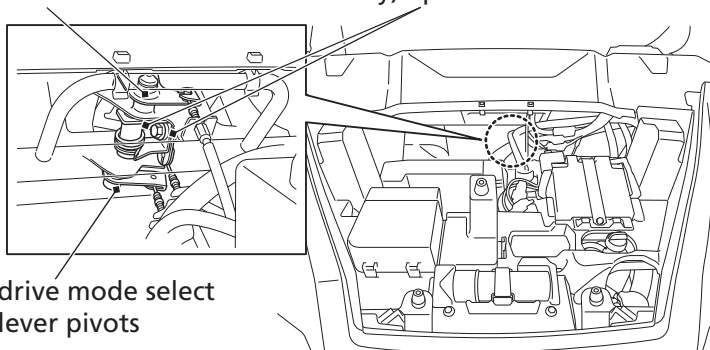

**drive mode select
lever pivots**