

# If the Transmission Is Not Functioning Properly

---

6. Turn the ignition switch to the START ( II ) position, and then start the engine.
  7. Check that the gear position ( "1", "2", "3", "4", "5" or "6" ) is blinking.
  8. At high-range (H) or low-range (L), you can drive only in the gear position that is blinking. You can also drive in reverse (R).  
To avoid damaging the clutch, we recommend that you drive in low-range (L). The engine brake may not work, so please drive slowly. See your dealer as soon as possible.
- When in the reverse (R), high-range (H), or low-range (L) position, low oil temperatures will cause the vehicle to move slowly. Shift into the park (P) position and warm up the engine.
  - When restarting the engine, although "E" stops blinking, the gear position ( "1", "2", "3", "4", "5" or "6" ) blinks, and the low oil pressure indicator comes on, you can drive the vehicle.