


# If a Fuse Blows


## *Electric Power Steering (EPS) Fuse Access (except for SXS1000M3)*

1. Turn the ignition switch to OFF (w) before checking the fuse.
2. Remove the front hood (page 137).
3. To access the EPS fuse, remove the fuse cover.  
If the EPS fuse is blown, see your dealer for this service.
4. Install the fuse cover.
5. Install the front hood.

(SXS1000M3P/M5P/M5D)

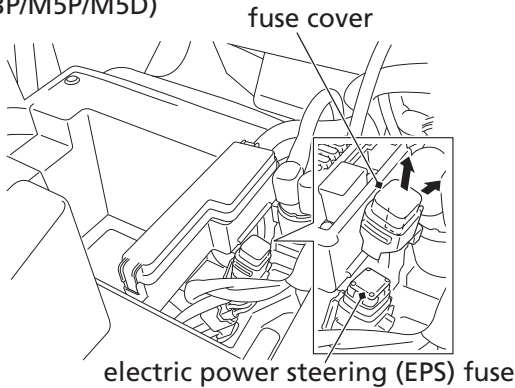

(SXS1000M3L/M5L)

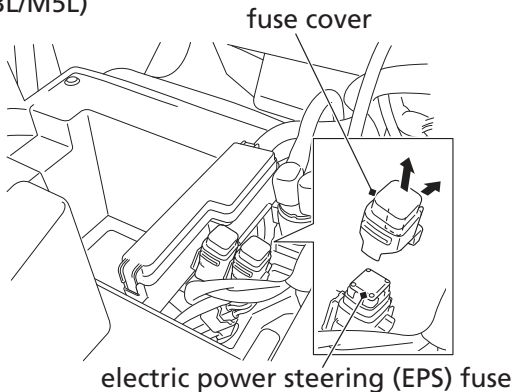

(cont'd)