


# Driver Controls

---

## AT/MT Switch (except for SXS1000M3)

The AT/MT switch is located on the right side of the shift select lever. When the shift select lever is in the high-range (H) or low-range (L) position, you can switch between AT mode and MT mode by pressing the AT/MT switch.

(SXS1000M3P/M5P/M5D)

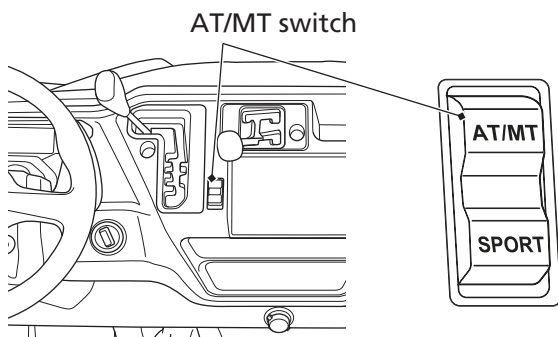

(SXS1000M3L/M5L)

