


# Indicators & Displays

## Fuel Gauge

The fuel gauge shows the approximate fuel supply available. The fuel tank capacity is:

7.66 US gal (29.0 ℓ)

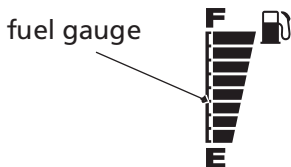

When the last segment blinks, you should refill the tank as soon as possible. The amount of fuel remaining when the blinking starts is approximately:

0.90 US gal (3.4 ℓ)



Fuel gauge failure:

If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustrations.

If this occurs, see your dealer as soon as possible.

