

Driver Controls

AT/MT Switch

The AT/MT switch is located below the multi-function display. When the shift select lever is in high-range (H) or low-range (L) position, you can switch between AT mode and MT mode by pressing the AT/MT switch.

