

Driver Controls

4. Release the pressure from the brake pedal and apply the accelerator.
 - HSA is active for 1.5 seconds or until the accelerator is applied. HSA will self cancel if the accelerator is not applied within 1.5 seconds of pushing the HSA button.
 - HSA is not a parking brake.
 - HSA may not prevent the vehicle from rolling downhill if the vehicle is overloaded, on a steep hill, or sliding in slippery conditions.

NOTICE

Avoid prolonged Hill Start Assist (HSA) use, as continuous operation may cause the system to overheat and fail.

LAUNCH MODE Switch (SXS1000S4D only)

The LAUNCH MODE switch is under the HSA switch.

The LAUNCH MODE switch is used to operate the launch mode. For launch mode operation procedure, see page 96.

