

# Basic Operation

---

## Selecting a Drive Mode

You can change the drive mode at any time the engine is running. See page 41 for additional information.

### **2WD**

This mode supplies power to the rear wheels. This mode is best for surfaces that provide good traction.

### **I - 4WD**

This mode supplies power to the front and rear wheels. In addition, Brake Traction Control System (BTCS) will work to enhance vehicle stability in slippery conditions.

Brake Traction Control System (BTCS):

BTCS applies the front brake in slippery conditions to help prevent loss of traction due to wheel spin when applying the accelerator pedal.

When applying the brake while BTCS is operating, the brake pedal will have a flutter feel. This is normal.