

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
ITEMS	FREQUENCY (Whichever comes first)	x100 mi x100 km Hours	Initial maintenance	Regular maintenance interval						Note	Refer to page
			1	6	12	18	24	30	36		
Check engine oil and coolant			t	6	12	18	24	30	36		140, 160
Check tires			Check inflation and condition once a month							193	
Check side net and mounting hardware			t	t	t	t	t	t	t		53
Check brake fluid			Check fluid level once a month							187	
Replace engine oil and oil filter			t								142
Check sub-transmission oil			t		t		t		t		150
Replace sub-transmission oil				Every 2 years (regardless of mileage)							152
Replace DCT oil filter			t			t					147
* Inspect valve clearance			t			t			t	1	—
* Clean spark arrester				t	t	t	t	t	t		177
Replace air cleaner element				t	t	t	t	t	t	2	165
Check air cleaner housing drain tube				t	t	t	t	t	t	3	167
Check spark plugs					t	t			t		174
* Inspect idle speed			t			t			t		—
* Check fuel lines and connections						t			t		—
Check front and rear brakes			t			t			t	3	186
Replace front and rear final gear oil			t			t			t		155, 157

* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 270).

Note 1 Inspect valve clearance as needed, if engine is noisy.

Note 2 Service more frequently when operating in dusty areas, sand or snow.

Note 3 Service more frequently when operated in muddy conditions.