


Maintenance Component Locations

—————→ Indicates something visible.

.....→ Indicates something concealed.

driver seat
(page 130)

passenger seat
(page 130)

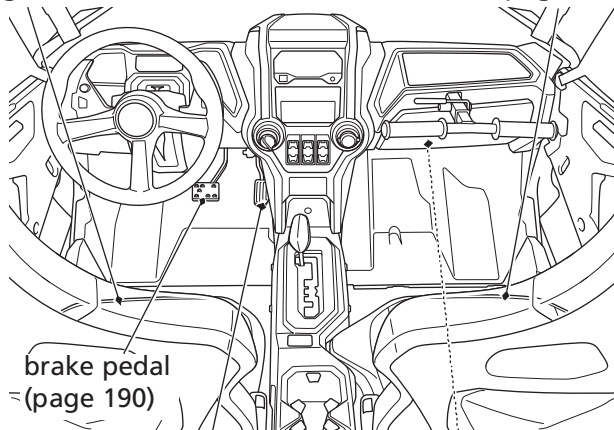

brake pedal
(page 190)

accelerator pedal
(page 172)

owner's manual
(page 128)

left rear passenger
seat (page 130)

right rear passenger
seat (page 130)

