

# Seat Removal


---

Refer to *Safety Precautions* on page 115.

All seats can be removed in the same manner.

## Removal

1. Open the door (page 51).
2. Pull the seat lock lever at the front center of the seat.
3. Pull the front of the seat upward then slide it slightly forward.

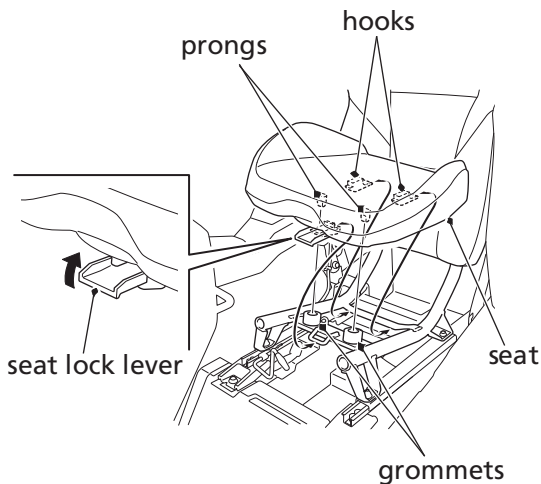

## Installation

1. Insert the hooks into the frame and the prongs into the grommets of the seat.
2. Press down on the seat until it locks.

Make sure that the seat is locked securely in position by pulling it up lightly.

Since the bottom shapes of the driver/left rear passenger seats and front/right rear passenger seats are different, install them in their correct position.