

# Air Cleaner

## Air Cleaner Housing Drain Tubes

Your Honda SXS has two air cleaner housing drain tubes (clean side and dirty side).


The air cleaner housing drain tubes should be serviced every 600 miles (1,000 km) or 100 hours of operating your Honda SXS. (Driving through water may require more frequent inspection.)

If deposits can be seen in the dirty side drain tube, the tube must be cleaned before starting the vehicle.

### Dirty side

1. Place a suitable container under the crankcase breather tube.
2. Remove the air cleaner housing drain tube by removing the clip.
3. Drain the deposits.
4. Reinstall the air cleaner housing drain tube, securing it with the clip.

### UNDER RIGHT REAR FENDER

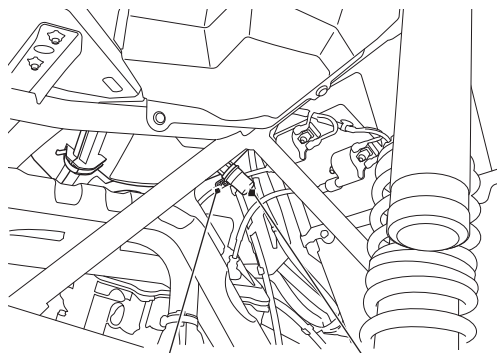

clip

air cleaner housing  
drain tube