


# Lubrication

---

## Lubrication Points

Lubricate the steering wheel tilt pivots as shown in the following illustration. Remove the clips (page 132) and the lower cover.

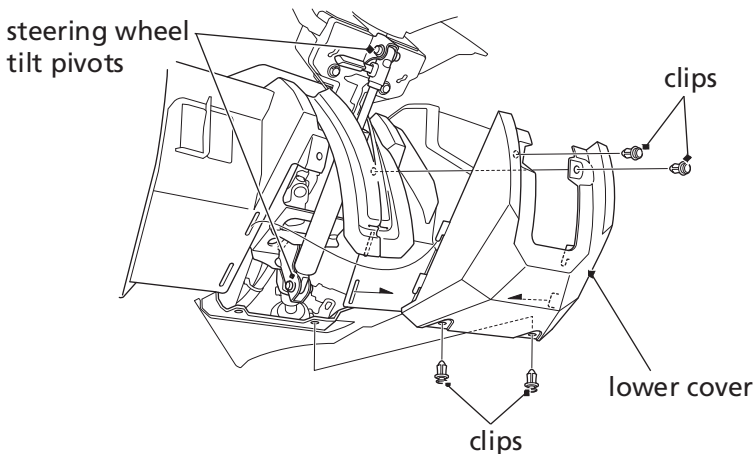

Lubricate the brake pedal pivot and accelerator pedal pivot as shown in the following illustration.

