


# Driver Controls

## Parking Brake Lever

The parking brake lever is located just in front of the bench seat between the driver's and passenger's seating positions. To apply the brake, pull the lever up fully. To release it, pull up slightly, push the button at the end of the lever, then lower it.

Before driving, check that the parking brake indicator is off.

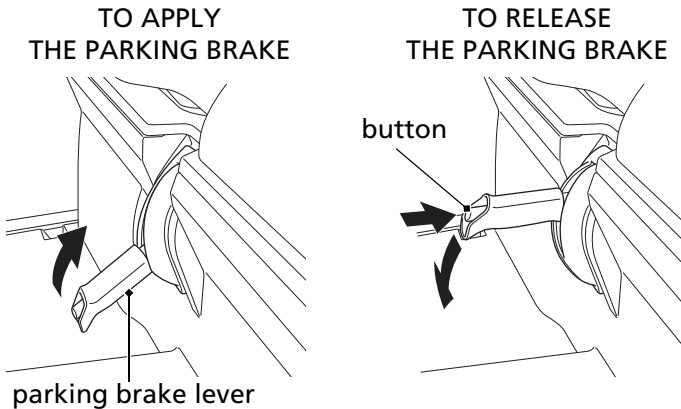

### NOTICE

*Driving with the parking brake on can damage the rear brake and drivetrain.*