

Basic Operation

MT mode

In this mode, the gears are shifted manually through shift paddle operation.

You can select five forward gears, neutral and reverse by operating the right side upshift paddle and left side downshift paddle.

The gear position indicator will show “1, 2, 3, 4, or 5” for forward gears, “N” for neutral, and “R” for reverse.

- Holding the shift paddle does not continuously shift the gears. To continue shifting, release your fingers from the shift paddle, and then pull the shift paddle again.
- The gears do not shift up automatically in MT mode. Do not allow the engine to exceed the rev limit.
- The gears shift down automatically when you slow down, even in MT mode.