

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).										
		Initial maintenance	Regular maintenance interval						Note	Refer to page
FREQUENCY (Whichever comes first)	x100 mi	1	6	12	18	24	30	36		
	x100 km	1.5	10	20	30	40	50	60		
ITEMS	Hours	20	100	200	300	400	500	600		
	Month	1	12							
	Check engine oil and coolant	Check oil and coolant at fuel stop							117, 129	
	Check tires	Check inflation and condition once a month							162	
	Check side net adjustment and snap hooks	●	●	●	●	●	●	●	41	
*	Reverse inhibitor system	●	●	●	●	●	●	●	143	
	Check brake fluid	Check fluid level once a month							155	
	Replace engine oil and oil filter	●	●	●	●	●	●	●	119	
*	Inspect valve clearance	●	Every 600 miles (1,000 km) or 100 operating hours, otherwise adjust only if noisy							—
*	Clean spark arrester		Every 600 miles (1,000 km) or 100 operating hours, whichever comes first							148
	Clean air cleaner elements								1	134
	Check air cleaner housing drain tube								2	137
	Check spark plug									145
*	Inspect idle speed	●							—	
*	Check fuel lines and connections		●		●		●		—	
	Check front and rear brakes	●		●			●	3	154	
	Check front and rear final gear oil	●		●			●		124, 126	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 232).

Note 1 Service more frequently when operating in dusty areas, sand or snow.

Note 2 Service more frequently when operated in muddy, very wet conditions, or freezing temperatures.

Note 3 Service more frequently when operated in muddy conditions.