

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
		Initial maintenance	Regular maintenance interval								
FREQUENCY (Whichever comes first)	×100 mi	1	6	12	18	24	30	36	Note	Refer to page	
	×100 km	1.5	10	20	30	40	50	60			
ITEMS	Hours	20	100	200	300	400	500	600			
	Month	1	12								
	Lubricate all hinges, latches, and pivots	●	●	●	●	●	●	●		138	
**	Inspect the following items:									—	
	Suspension components									—	
	Wheels									168	
	Driveshaft boots									169	
	Accelerator and brake pedals				●			●		141, 158	
	Brake light switch									160	
	Exhaust system									149	
	Battery terminal condition									171	
	Check parking brake adjustment	●						●		159	
**	Inspect the following items:									—	
	Tie-rod ends									—	
*	Steering gearbox and boots							●		—	
*	Brake hoses and lines									—	
*	SXS underbody								4	—	
*	Inspect evaporative emission control system (USA - 50 states [meets California])							Every 2 years (regardless of mileage)		—	
	Replace the following items:									—	
	Front and rear final gear oil							Every 2 years (regardless of mileage)		124, 127	
*	Engine coolant									131	
*	Brake fluid									—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 232).

** In the interest of safety, we recommend these items be serviced only by your dealer.

Note 4 Check the underbody whenever the under guard has been hit.