

Front Hood

Refer to *Safety Precautions* on page 91.

The front hood must be removed to lubricate the drive mode select lever pivot, brake light switch adjustment, reverse inhibitor system adjustment and throttle cable adjustment, to check the coolant level and for washing the radiator fan area.

Removal

1. Turn the knobs outward.
2. Remove the prongs from the grommets.
3. Remove the front hood.

Installation

1. Insert the hooks into the slots.
2. Install the prongs into the grommets.
3. Turn the knobs inward.

