

# Seat Bottom Removal


---

Refer to *Safety Precautions* on page 91.

The seat bottom must be removed to check the engine oil level, to add engine oil, to change the engine oil filter, and to access the tool kit, gear change tool and owner's manual.

## Removal

1. Open the doors (page 40).
2. Pull the rear of seat bottom upward then slide it slightly backward.

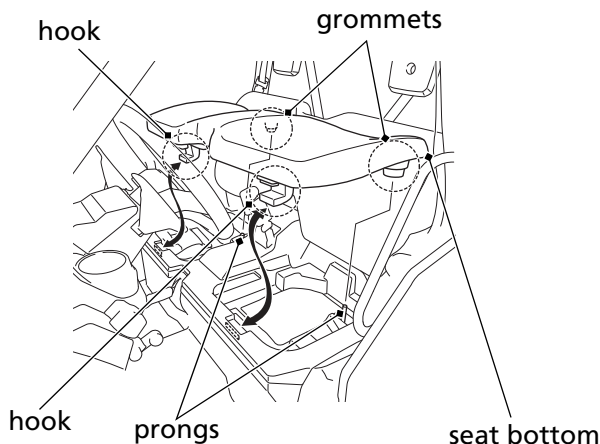

## Installation

Insert the hooks into the frame and the prongs into the grommets of the seat bottom.