

# Center Rear Panel Removal


---

Refer to *Safety Precautions* on page 91.

The center rear panel must be removed for spark plug maintenance, to change the engine oil filter, to clean the air cleaner.

## Removal

1. Remove the seat back (page 107).
2. Release the prongs from their grommets.
3. Pull the center rear panel forward.

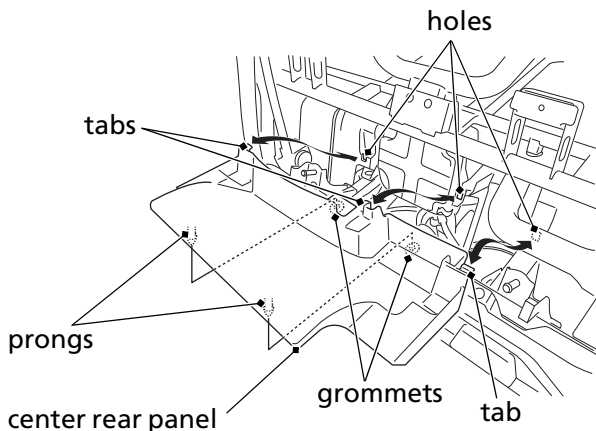

## Installation

1. Insert the tabs into the holes.
2. Install the prongs into their grommets.
3. Install the center rear panel.