

Clip Removal

Clip removal and installation:


Removal

1. Pull up the center pin to release the lock.
2. Pull out the clip of the hole.

1




2

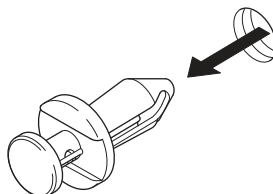

Installation

1. Insert the clip into the hole.
2. Press down the center pin securely to lock the clip.

1

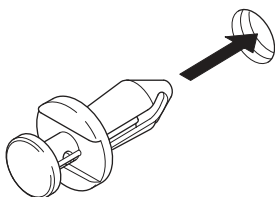

2

