

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 91.

Your Honda SXS's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

NOTICE

Using the wrong oil filter may result in leaks, premature wear, or engine damage.


This procedure requires mechanical skill and professional tools such as a torque wrench, and access from underneath the vehicle, as well as the means for disposing of the drained fluid (page 188). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. Make sure the Honda SXS is parked on level ground. Set the parking brake, and jack up and support your Honda SXS (page 110).
2. Remove the seat bottom (page 106) and fold open the rubber dust cover.
3. Remove the oil filler cap/dipstick.

UNDER SEAT BOTTOM

LEFT SIDE

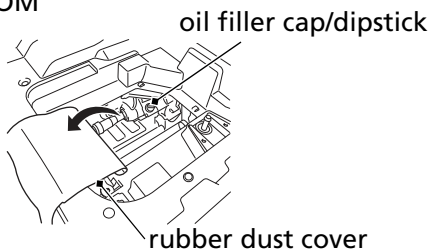

(cont'd)