

Air Cleaner

Cleaning

1. Remove the seat back (page 107) and center rear panel (page 108).
2. Unlatch the retainer clips.
3. Remove the air cleaner housing cover.

UNDER CARGO CARRIER

