

# Air Cleaner

## Air Cleaner Housing Drain Tube

The air cleaner housing drain tube should be serviced in accordance with the Maintenance Schedule. (Driving through water may require more frequent inspection.) If deposits can be seen in the drain tube, the tube must be cleaned before starting the vehicle.

1. Remove the air cleaner housing drain tube plug by removing the clip.
2. Drain the deposits.
3. Reinstall the air cleaner housing drain tube plug, securing it with the clip.

### RIGHT REAR

