

Accelerator Pedal

Accelerator Pedal Inspection

Refer to *Safety Precautions* on page 91.

If the accelerator pedal has excessive play due to cable stretch or incorrect adjustment, it will cause a delay in throttle response, especially at low engine speed. Also, the accelerator may not open fully.

If the accelerator pedal has no play, the accelerator may be hard to control, and the idle speed may be erratic.

Check the accelerator pedal play periodically in accordance with the Periodic Maintenance Chart, and adjust the play if necessary.

Refer to the maintenance schedule on page 96.

Inspection

Check freeplay of the accelerator pedal.

Freeplay:

5/16 – 1/2 in (8 – 13 mm)

