
Reverse Lever Inspection

Refer to Safety Precautions on page 91.

Check that the reverse lever moves smoothly and allows for proper reverse gear selection, and adjust the play if necessary. Refer to maintenance schedule on page 95.

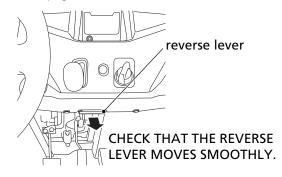

Inspection

Check freeplay of the reverse lever. Freeplay:

1/4 - 1/2 in (6.0 - 12.0 mm)

