

# If the Transmission Is Not Functioning Properly

---

When the transmission is not shifting properly, the gear position indicator will show “-” and blink or the gear position (“1”, “2”, “3”, “4”, “5”, “N” or “R”) is blinking.

See your dealer to check and restore the transmission.

If the gear position indicator shows “-” and blink or the gear position (“1”, “2”, “3”, “4”, “5”, “N” or “R”) is blinking while driving, perform the following:

1. Stop the SXS.
2. Turn the ignition switch to the OFF (O) position.
3. After the engine stops, turn the ignition switch to the ON (I) position.
4. Check the gear position indicator.

If these efforts do not restore proper operation, have your SXS inspected by your dealer.

When the “-” is blinking or the gear position (“1”, “2”, “3”, “4”, “5”, “N” or “R”) is blinking in the gear position indicator:

Restart the engine; drive the SXS by operating the shift paddles to a location where it can be loaded and transported to your dealer. We recommend that you drive slowly in 1st gear.

When the display on the gear position indicator returns to normal:

You may drive on the SXS as usual after restarting the engine. However, we urge you to have your SXS inspected by your dealer.