

If a Fuse Blows

Circuit Fuse Access

6. To access the circuit fuse, remove the fuse box cover.
7. To check or replace a circuit fuse, pull the old fuse out. If the fuse is blown, replace it with a spare fuse of the same rating. Spare fuses are located in the fuse box.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

8. Install the fuse box cover.
9. Install the battery cover.

