

# Driver Controls

---

## Headlight Switch

The headlight switch is located on the front console, to the left of the steering wheel. This switch turns the headlights and taillights on and off.

