

# Basic Operation

---

## Driving in AT mode

After starting the engine and letting it warm up, follow this procedure:

1. With the shift select lever in neutral (N), release the parking brake, but continue to press the brake pedal.
2. With the throttle closed, move the shift select lever into drive (D) position.
3. (SXS700M2D/M4D only)  
Select AT mode by turning the AT/MT switch.
4. Release pressure from the brake pedal and increase engine speed by gradually pressing the accelerator pedal.

## Temporarily changing gears by operating the shift paddle while AT mode is selected (SXS700M2D/M4D only)

You can temporarily change gears by operating the shift paddles even while AT mode is selected.

When operating the shift paddles while AT mode is selected, the "D" displayed in the gear position indicator changes to a gear position number (1 – 3).

Because the gear change is temporary, the vehicle automatically returns to normal AT mode under the following conditions:

- When the shift paddles are not operated for a prescribed time
- When the vehicle speed is reduced or increased beyond the automatic shifting speed

Shift Limit:

During MT mode, downshifts may not be executed if it causes the engine to exceed the rev limit.