

Servicing Your Honda

Seat Removal.....	122
Jack Up Point & Support Point	123

Service Procedures

Fluids, Filters & Lubricants

Fuel	124
Engine Oil & Filter	127
Front Final Gear Oil.....	137
Rear Final Gear Oil.....	139
Coolant	141
Air Cleaner	146
Lubrication	151

Engine

Accelerator Pedal.....	156
Spark Plugs.....	158
Spark Arrester	161
Exhaust System.....	163

Chassis

Suspension	164
Frame	166
Brakes	167
Tires	174
Wheels	181
Driveshaft Boots	182

Electrical

Battery	183
Appearance Care.....	188