


# Lubrication

---

Lubricate the parking brake pivot as shown in the following illustration.

Remove the dust cover.

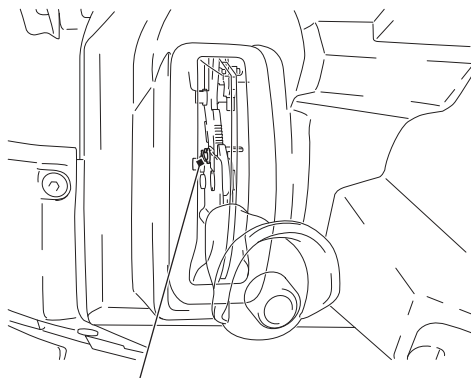

parking brake pivot

Lubricate the drive mode select lever pivot and shift select lever pivot as shown in the following illustration.

Remove the front hood (page 119).

## UNDER FRONT HOOD

drive mode select lever pivot

shift select lever pivot

