


If a Fuse Blows

All of the electrical circuits on your Honda SXS have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your Honda SXS stops working, the first thing you should check for is a blown fuse.

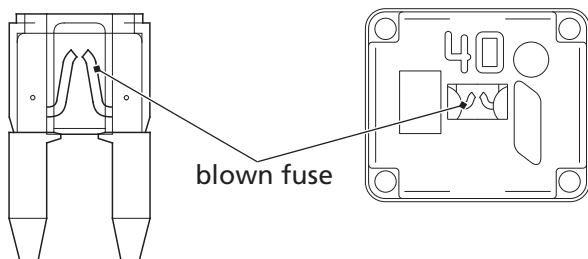

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

The main fuse and the electric power steering (EPS) fuse are located in the battery compartment under the seat. The circuit fuses are located in fuse box under the front hood.

Recommended Fuses

main fuse	40 A
circuit fuses	15 A x 4, 10 A x 2
electric power steering (EPS) fuse (SXS700M2D/M4D only)	40 A