

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST  ⇒	INITIAL		REGULAR		Refer to page	
			MAINT.		MAINT. INTERVAL			
			mi	100	600	1200		
			km	150	1000	2000		
NOTE	MONTH	1	6	12				
		HOURS	20	100	200			
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	102	
*	BRAKE FLUID	NOTE 3				I	120	
*	BRAKE SHOE WEAR	NOTE 1				I	132	
*	BRAKE LIGHT SWITCH			I	I	I	133	
	BRAKE SYSTEM			I	I	I	120	
*	REVERSE INHIBITOR SYSTEM			I	I	I	113	
	GUARDS					I	141	
*	CLUTCH SYSTEM			I	I	I	112	
*	SUSPENSION					I	—	
*	SPARK ARRESTER					C	C	119
*	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I	I	I	135	
**	TIE-ROD AND JOINT BOOTS			I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS					I	—	
**	STEERING SYSTEM					I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.