

Gear Case Oil

Oil Recommendation

| | |
|--------------------|-------------------------------------|
| type | hypoid gear oil |
| viscosity (weight) | SAE 80W-90 |
| suggested oil | Honda shaft drive oil or equivalent |

Changing Oil

Refer to *Safety Precautions* on page 81.

Change the oil with the gear case at normal operating temperature to assure complete and rapid draining.

1. Park the ATV on level ground.
2. Place an oil drain pan under the oil drain plug (1).
3. Remove the oil fill cap (2) and the drain plug and sealing washer (3).
4. After the oil has completely drained, reinstall the drain plug with a new sealing washer, and tighten it to the specified torque:
9 lbf·ft (12 N·m , 1.2 kgf·m)
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 160).

NOTICE

Improper disposal of drained fluids is harmful to the environment.