

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

FREQUENCY ITEMS		WHICHEVER COMES FIRST ⇒	INITIAL MAINT.	REGULAR MAINT. INTERVAL			Refer to page
				mi	600	1200	
				km	1000	2000	
				MONTH	1	6	12
		NOTE	HOURS	20	100	200	
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	109
*	CARBURETOR CHOKE					I	111
	AIR CLEANER	NOTE 1			C	C	104
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	108
	SPARK PLUG				I	I	115
*	VALVE CLEARANCE			I	I	I	118
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			96
**	ENGINE OIL STRAINER SCREEN					C	—
**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED			I	I	I	114

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

** In the interest of safety, we recommend these items be serviced only by your dealer.