

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
NOTE	HOURS	20	100	200				
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	97	
*	BRAKE FLUID	NOTE 3				I	119	
*	BRAKE SHOE WEAR	NOTE 1				I	125	
*	BRAKE PAD WEAR	NOTE 1, 2				I	122	
*	BRAKE LIGHT SWITCH			I	I	I	128	
	BRAKE SYSTEM			I	I	I	119	
*	REVERSE INHIBITOR SYSTEM			I	I	I	111	
	GUARDS				I	I	136	
*	CLUTCH SYSTEM			I	I	I	107	
*	SUSPENSION				I	I	—	
*	SPARK ARRESTER				C	C	117	
*	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I	I	I	—	
**	TIE-ROD AND JOINT BOOTS			I	I	I	—	
**	STEERING SHAFT HOLDER BEARING					I	—	
**	STEERING SYSTEM					I	—	

- \* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 192).
- \*\* In the interest of safety, we recommend these items be serviced only by your dealer.