

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER	INITIAL	REGULAR		Refer to page	
		COMES	MAINT.	MAINT. INTERVAL			
		FIRST	mi	100	600		1200
		⇨	km	150	1000		2000
		NOTE	MONTH	1	6		12
	HOURS	20	100	200			
*	FUEL LINE				I	—	
*	THROTTLE OPERATION				I	105	
*	CARBURETOR CHOKE				I	107	
	AIR CLEANER	NOTE 1		C	C	100	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2		I	I	104	
	SPARK PLUG			I	I	111	
*	VALVE CLEARANCE			I	I	114	
	ENGINE OIL		INITIAL =100mi (150km), 20 operating hours or 1month : R REGULAR=EVERY 600mi (1000km), 100 operating hours or 12 months : R			92	
**	ENGINE OIL STRAINER SCREEN				C	—	
**	ENGINE OIL CENTRIFUGAL FILTER				C	—	
*	ENGINE IDLE SPEED			I	I	110	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 192).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.