

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
	NOTE	HOURS	20	100	200			
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	98	
*	BRAKE FLUID	NOTE 3				I	116	
*	BRAKE SHOE WEAR	NOTE 1				I	128	
*	BRAKE LIGHT SWITCH			I		I	129	
	BRAKE SYSTEM			I		I	116	
*	REVERSE LOCK SYSTEM			I		I	109	
	GUARDS					I	137	
*	CLUTCH SYSTEM			I		I	108	
*	SUSPENSION					I	—	
*	SPARK ARRESTER					C	C	115
**	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I		I	131	
**	TIE-ROD AND JOINT BOOTS			I		I	—	
**	STEERING SHAFT HOLDER BEARINGS					I	—	
**	STEERING SYSTEM					I	—	

- * Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 192).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.