

Engine Oil

Changing Engine Oil


Refer to *Safety Precautions* on [page 77](#).

This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid ([page 156](#)). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. With the ATV on level ground, remove the oil fill cap/dipstick from the front crankcase cover.
2. Place an oil drain pan under the crankcase and remove the engine oil drain plug (1) and sealing washer (2).

UNDER ENGINE

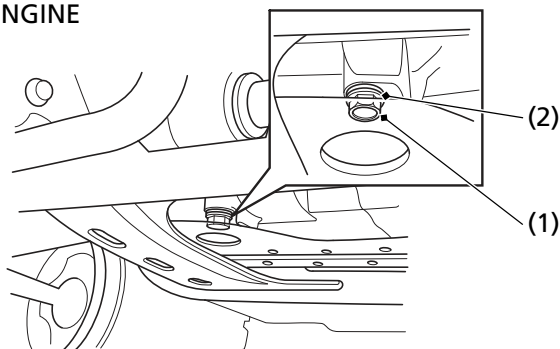

(1) engine oil drain plug

(2) sealing washer